

Example of Accelerator Stopper

• It is recommended that the stopper be installed on the floor or on the underside of the pedal, with a gap of approximately 10mm from full stroke.

<For LHD cars>


• When the stopper is installed in the



Pedal Stopper

At full stroke, with a gap of 10mm.

• When the stopper is installed on the

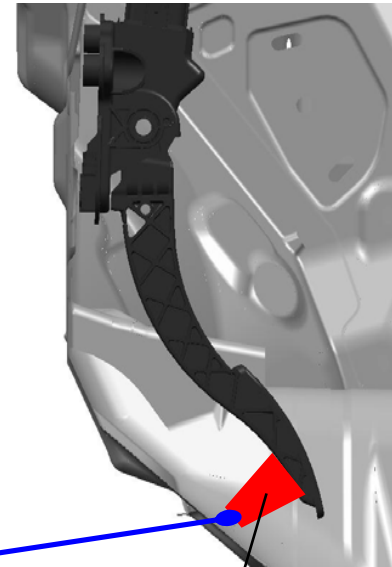

Pedal Stopper

< For RHD cars

• When the stopper is installed in


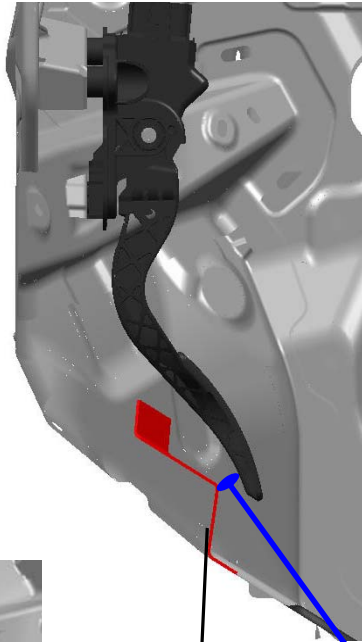



Image drawing

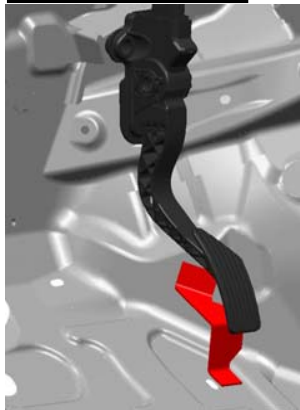

Pedal Stopper

At full stroke, with a gap of 10mm

• When the stopper is installed

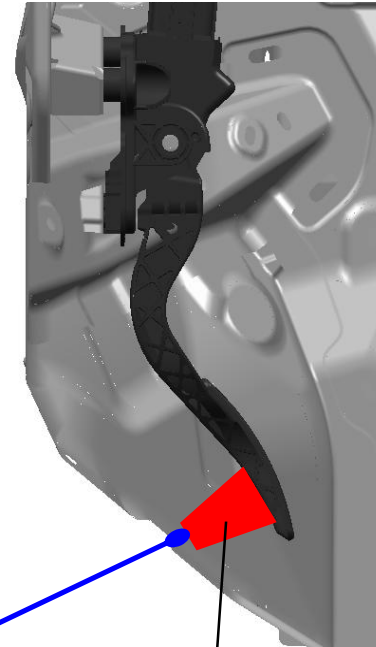

Pedal Stopper